

SIA and CID reporting code descriptions

CID Code	Class	SIA Code	Event
E110	Alarm	FA	Fire alarm
R110	Alarm restore	FR	Fire alarm restore
E120	Alarm	PA	24 hour alarm
R120	Alarm restore	PR	24 hour alarm restore
E130	Alarm	BA	Burg alarm
R130	Alarm restore	BR	Burg alarm restore
E570	Bypass	B	Bypass
R570	Bypass	U	Bypass restore
E383	Zone tamper	TA	Tamper
R383	Zone tamper	TR	Tamper restore
E380	Trouble	T	Trouble
R380	Trouble	R	Trouble restore
E384	Sensor batt	XT	Sensor low battery
R384	Sensor batt	XR	Sensor low battery restore
E381	Sensor lost	S	Wireless supervision
R381	Sensor lost	R	Wireless supervision restore
E200	Sensor lost	SS	Fire supervision
R200	Sensor lost	SR	Fire supervision restore
E391	Sensor lost	NA	Zone activity supervision
R391	Sensor lost	NS	Zone activity supervision restore
E378	Alarm	BG	Cross zone initial trip
R378	Alarm	BR	Cross zone initial trip restore
E389	Sensor batt	AS	Fire maintenance alarm
R389	Sensor batt	AN	Fire maintenance alarm restore
E426	Access alarm	DL	Door propped
R426	Access alarm	DH	Door propped
E423	Access alarm	DF	Door forced
R423	Access alarm	DR	Door forced
E611	Test	TP	Start walk test zone
E389	Test	TE	End zone test
E611	Test	TP	Walk test zone passed
E389	Test	TE	Walk test zone failed
E383	Zone tamper	TA	Tamper
R383	Zone tamper	TR	
E139	Alarm	BA	
E130	Alarm	BV	
E129	Alarm	HA	
E120	Alarm	HV	
E129	Alarm	PA	
E120	Alarm	HV	
E115	Manual alarm	FA	Manual fire
E100	Manual alarm	MA	Manual medical
E123	Manual alarm	PA	Manual audible panic
E122	Manual alarm	HA	Manual silent panic
E124	Manual alarm	HA	Duress
E461	Tamper	JA	Keypad lockout
E137	Tamper	TA	Box tamper

R137	Tamper	TR	Box tamper restore
E301	Ac power	AT	Mains fail event
R301	Ac power	AR	Mains fail event restore
E302	Battery power	YT	Battery low event
R302	Battery power	YR	Battery low event restore
E312	Aux power	YI	Over current
R312	Aux power	YJ	Over current restore
E320	Siren trouble	YA	Siren tamper
R320	Siren trouble	YH	Siren tamper restore
E351	Telephone cut	LT	Telephone fault
R351	Telephone cut	LR	Telephone fault restore
E354	Comms fail	YC	Communication failure
R354	Comms fail	YK	Communication failure restore
E333	Expander trouble	ET	Device failure
R333	Expander trouble	ER	Device failure restore
E401	Open	OP	Open
R401	Open	CL	Close
E401	Open	OP	First open
R401	Open	CL	Last close
E451	Open	CG	Partial close
E374	Recent close	EE	Exit error
E459	Recent close	CR	Recent close
E406	Cancel	AB	Abort
E406	Cancel	OC	Cancel
E602	Automatic test	RP	Automatic test
E601	Test	RX	Manual test
E625	Local program	JT	Clock changed
E627	Local program	LB	Start local program
E628	Local program	LX	End local program
E627	Remote program	RB	Start remote program
E628	Remote program	RS	End remote program
E607	Test	TS	Start walk test mode
R607	Test	TE	End walk test mode
E466	Recent close		Technician arrival
R466	Recent close	YZ	Technician left
E310	System troubles	FT	Ground fault
R310	System troubles	FR	Ground fault restore
E606	Alarm	LF	Start listen in
R606	Alarm	LE	End listen in
E451	Open	OK	Early opening (disarmed before opening window)
R452	Open	CJ	Late closing (armed after the opening window)
E453	Open	OI	Fail to open
E454	Open	CI	Fail to close
E344	System troubles	XQ	Wireless jam
R344	System troubles	XH	Wireless jam restore
E414	System troubles		System shut down
R414	System troubles	RR	System turn on
E323	Access	RC	Output activated
R323	Access	RO	Output restored

E531	Expander trouble	SC	Device enrolled
E422	Access	DG	User activated output
E422	Access	DG	Door access
E421	Access	DV	Door access denied
E305	Comms fail	YW	Watchdog reset
R451	Open	OP	Partial open
E401	Abortable alarm	BC	Abort alarm
E102	Access	JK	Guard tour fail
E641	Test	NA	Activity monitor fail
E422	Access	DG	Valid code entered
E421	Access	DP	Valid code out schedule
E421	Access	DV	Valid code void
E421	Access	DV	Valid code lost
E421	Access	DV	Valid code expired
E628	Access	RU	Remote program fail
E102	Access	CL	Man down rearm
E305	Expander trouble	RR	Powerup
R305	Expander trouble	RR	Powerup restore
R601	Test	RX	Manual test restore
E452	Open	OJ	Late opening
R451	Open	CK	Early closing
E532	Device bypass	UB	Device bypass
E531	Device bypass	UU	Device unbypass
E304	Checksum fault	YF	Checksum failure
R304	Checksum fault	YG	Checksum failure restore
E338	Battery power	YT	Expander low battery
R338	Battery power	YR	Checksum failure restore
E337	Battery power	YT	DC fail
R337	Battery power	YR	DC fail restore
E609	Video		Video event
E351	Comms fail	LT	IP path fault
R351	Comms fail	LR	IP path fault restore
E458	Open		Geo fence 1 entered
R458	Open		Geo fence 1 exited
E458	Open		Geo fence 2 entered
R458	Open		Geo fence 3 exited
R351	System troubles	LR	Power supply fault
R351	System troubles	LR	Power supply fault restore